



# Jeep

# Wrangler

**AGES 3+**

Model: DK-JWR555  
 Age Range: 37-96 Month  
 Maximum Weight: 35 KGS  
 Execution Standard:  
 GB6675&GB19865   
 EN71&EN62115



All spare parts When open the carton




With MP4 configuration, there is no MP3 cable

### Assembling Procedure:

Must be assembled by Adults

1. Installation of front bumper and motors.

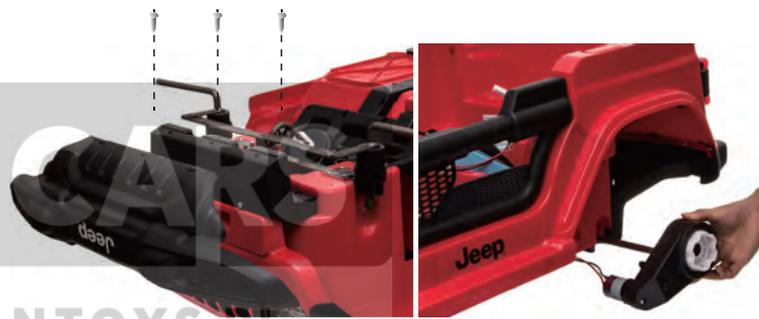

Please find motors first, and disconnect them; Insert motors to the axle, and insert lines into the hole of car body. Connect power lines again. (Please refer to the photo)

2. Installation of wheels




Please install motor, wheel, bushing, gasket, nut, wheel cover following the sequence. (No need bushing when install EVA wheels)

Pictures are for reference only, please adhere to the original products as standard



Jeep, the Jeep grille and related logos, vehicle model names and trade dress are trademarks of FCA US LLC and used under license by Pinghu Dake Baby Carrier Co., Ltd. ©2019 FCA US LLC.

### 3. Installation of steering wheel

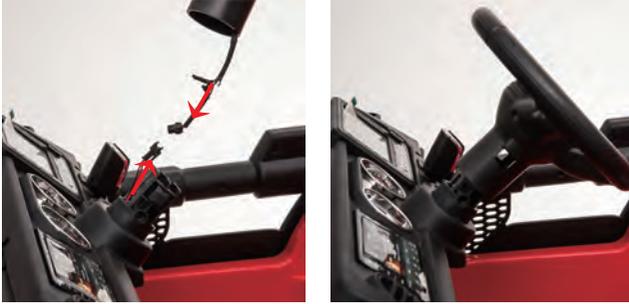

Connect power line first, and then assemble the steering wheel by pressing it down directly.

### 4. Installation of windshield and hood



### 5. Installation of rear view mirrors



Please insert the rear view mirrors referring to the photo, and pay attention to left and right.

### 6. Installation of searching lights



(Please refer to the photo)

### 7: Installation of seat built-in fitment



(Please refer to the photo)

### 8. Power Connection



Connect power referring to the photo.

(Please refer to the photo)

### 9. Installation of seat



(Please refer to the photo)


### 10: Seat and Spare Wheel



(Please refer to the photo)

LEAN CARS  
WWW.LEANTOYS.PL

### Exploded View

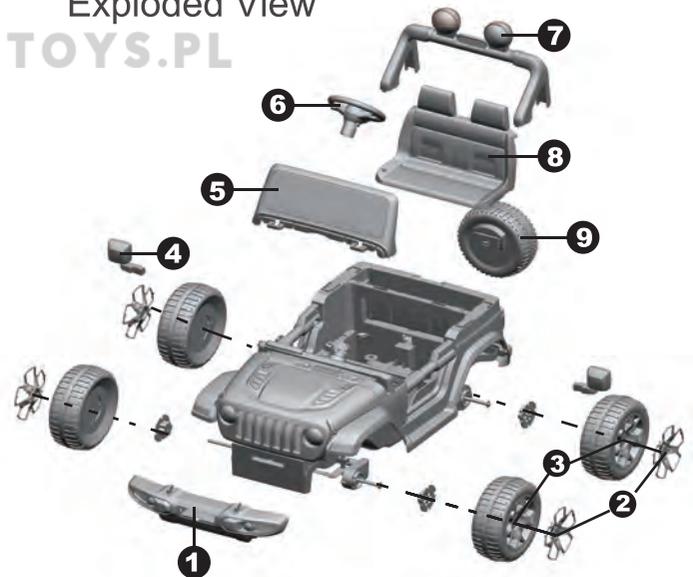

1. Front bumper	4. Rear view mirror	7. Searching light
2. Wheel cover	5. Wind Shield	8. Seat
3. Wheel	6. Steering wheel	9. Spare Wheel

## Specifications

Item	Specifications
Battery	12V7AH*1/12V10AH*1
Motor	35W
Available Ages	Children from 37-96 month
Maximum Weight	35KGS
Size	126*70*80CM
Speed	3-5km/h
Remote Control Batteries	2PCS of AAA Batteries
Charger	Input:220V/110V Output:DC12v1000MA

## CHARGING PRECAUTIONS

Battery polarity cannot be reversed, please ensure the red wire is connected to the red battery terminal and the black wire is connected to the black battery terminal.

- Press the power switch to OFF position to turn the power off.
- Open the seat, connect the battery plug, red to red.
- Never drain battery completely or to a crawling speed, recharge the battery when a decrease in speed and power is noticed warranty will be voided if misuse has occurred.
- Battery charging must be done by adults only. Never allow children to charge the battery. A child could be injured by the electricity involved in charging the battery.
- Please don't connect the wires to a short circuit.

The charger and the battery are not a toy. Do not allow children to play with the charger and the battery.

Only operate the battery and charger specified according to the manual instructions.

- Please do not open the battery and the charger.
- To maintain safety of vehicle, always secure the battery with the bracket.
- The battery must be handled and operated by adults only: the battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could result in serious injury.
- Before charging the battery check if wear or damage to the battery, charger, the connectors and other parts. If any damage is found, the charger should be repaired or replaced immediately. Do not use a damaged charger.
- It is normal for the adaptor to feel warm during charging, but if the charger feels too hot, stop charging immediately and check the battery and adaptor.

When charging turn of the power switch.

Please charge the battery for 8-10 hours after first use.

Subsequent charges should be 6-8 hours but not exceeding 10 hours.

If not being used batteries should still be charged at least once a month to keep the cells active.

1. Plug the charge into the charging socket.
2. Plug the other end of the charger into your wall socket.

Batteries are perishable items that are subject to under and overcharging, please observe the charging times. Charge Hole


## TROUBLESHOOTING

Problem: The car will not move

Answer 1: Please make sure the charger has been removed from the car charging point.

Answer 2: The battery is low on charger. Please charge for 6-8 hours but not exceeding 10 hours.

Charge at least once a month to keep the cells active

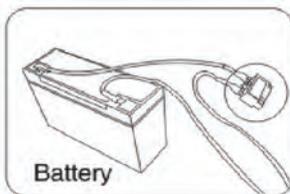

To avoid fuse cut off the power:

1. Max: 35kgs, overload is forbidden
2. Do not drag any item behind this product
3. Do not allow water or other liquids dip the electrical parts.
4. Do not change the line system by yourself.

## WARNING

- For safe driving, please kindly pay attentions to the following warning matters.
- The product must be assembled and adjusted by adult, please keep children away from moving parts.
- The product doesn't apply to 36-month and younger children due to internal small parts
- During driving, a child must be fixed by seat belt properly. Do not close to an fire!
- Any child must be supervised by adult while using the product and such the adult caregiver should not leave during driving process.
- Do not allow your children to stand or play on the food pedal or in the electric
- The battery must be charged only by adult. Please charge the product before using!
- To avoid any harm to children, please keep plastic bags and other packaging materials away from children! Such the materials may cause suffocation!
- It is prohibited to use any parts from other manufacturers.
- The charger should not be played as a toy.  
The vehicle maximum load weight is 35KG, and please do not use on overload, The product applies to children at 37-96 months.

- The toy should not be connected to excessive powers (more than the quantity specified herein), and it should not be operated during charging process.
- Must with the protection device, can't use as traffic tools.
- This toy without braking device.
- Instructions for remote controller batteries.
- All batteries should be inserted with the correct polarity.
- Non-rechargeable battery should not be charged, please remove any running-off battery from the toy.
- Do not use old and new batteries together, or mix different types of batteries.
- Power terminals should not be short-circuited.
- Any rechargeable battery must only be charged under adult's supervision.
- Rechargeable batteries should be removed from the toy before charging.
- Exhausted batteries are to be removed from the toys

## TROUBLESHOOTING

Problem: The car only runs for a short time

Answer 1: The battery is low on charge. Please change for 6-8 hours but not exceeding 10 hours.

Change at least once a month to keep the active.

Answer 2: Battery ageing

The battery may need to be replaced depending on its charging history and age.

Problem: The sounds do not work.

Please ensure the volume is turned up and the Mp3 lead is not connected.

The steering wheel sounds will not work when the MP3 is plugged into the car.

Problem: Charger overheating

It is normal for the battery and charger to warn slightly during

Charging, if they feel excessively hot then please

Check for a current overload or battery short circuit

**WARNING:** Vehicle must be charged fully before use.

Please read manual carefully before use.

Adult assembly required.

This toy have no brake.

Not to be used in traffic

Always wear a helmet and protective

clothing when riding.

Continuous adult at all times.

Please keep the manual and packing for future

reference as it contains important information

The instructions for used should bear a reminder

that the toy should be used with caution since skill

is require to avoid falls or collisions causing injury to the user or third parties.

Charging hole is under the seat. Can charge directly on the car or get out of the battery to charge according to proper situations.



## SAFETY PRECAUTIONS

01. While riding, adult supervision is required all the time
02. Always wear a helmet when driving/
03. Please don't drive near road or on the footpath.
04. It is not recommended to drive the vehicle on wet surface or on slope greater than 15-degree.
05. It is recommended to drive this vehicle on smooth surface only.
06. Please don't drive this vehicle outdoors when it is raining.
07. Make sure that the vehicle stop completely before changing direction from forward to reverse
08. Please don't allow children to operate the charger or play with the battery
09. Clean the vehicle with a dry cloth only.
10. Please follow the correct weight and age limits allowed to drive this vehicle.
11. It is prohibited to change the circuit or add other electric parts.
12. Adults must teach their children around safe driving procedures.
13. Please turn the power off when not in use.
14. Check the seat to ensure it has been fitted and secured with a bolt before driving.
15. Inspect all wires and connection of the vehicle periodically.
16. Charging the battery should only be done by adults.
17. Charging plug is located underneath the seat.
18. In order to avoid accidents, please ensure the vehicle is safe before driving.
19. Please don't let any child touch the wheels or be near them when the car is moving.
20. Please mind fingers in opening and closing doors.



1. Imitation of instrument board
2. Key switch
3. Dashboard
4. Forward/Stop/Backward

Button of loudspeaker Button of Music



- 1: MP3
- 2: display
- 3:TF socket
- 4:USB socket
- 5:Story (Pressing for a longer time and it will lower the volume)
- 6:Music(Pressing for a longer time and it will Higher the volume)
- 7:Education(Next one)
- 8:Model choose(Radio,Bluetooth,SD Card,MP3,USB Connector)

- 1.Press the music button on the steering wheel for horn or music.
- 2.Attach the MP3 lead to your advice to play or own music through the car.

Please note the steering wheel sounds wheel not work when the MP3 lead is connected.

### Operations Guide

First time to use(Or replace the battery) select not to pair,the car can move after turning on power. If select to be paired,please follow the bellows:

Step 1 Open the remote control battery compartment,put two AAA1.5V batteries into the battery compartment(pay attention to the battery cavity polarity),close the cap,the frequency lamp flashes if the battery is installed correctly.

Step 2 Turn the car power, hold press the frequency key for 2-3 seconds.

Step 3 Then turn on car power immediately, the frequency lights off.

Please repeat steps 23 if the

paring not in success of frequency.



- 1.Remote Control: Please check manual advice behind remote control.

HIGH speed - Three lamps flashing.Each owns slow start and stop.

2.Press the STOP key will stop the car;Other keys like it meant.

3.The remote control will power off after 15's without operating,any key will power on.

Products through the FCC certification testing and ECM credential.

This remote must be used by adult only

## Note on Safety

- 1.This vehicle is not suitable for children under 36 months .Please use this vehicle under the supervision of adults.
- 2.Please keep this vehicle far from pool,highway,slopes or other dangerous places
- 3.To avoid gearbox and motor damage.ensure the vehicle has completely stopped when shift gears.
- 4.Before using,parents should check the main parts:battery,charger. wires,plugs,shell and other parts for not damaging screw loose whether if there is potential security risks any damage found stop using until well repaired
- 5.To avoid rust lubricate the iron parts with lubricating oil after using for some time
- 6.The vehicle should be kept away from fire and long-term light side-up for shortage upside down
- 7.Do not use the fuse not matching the product
- 8.Do not change the wire system by yourself the repair work must be carried out under the guidance of professionals and technical staff

**Warning-When replacing a replaceable battery,first open the lid and take out the old battery.Put in the new battery,pay attention to the positive and negative poles,cover the lid.**

### ! WARNING!

For safety sake:

- \*Please use this vehicle under the adult guidance and supervision.
- \*Prohibited to use this product on the road,slopes, highway or other dangerous places!
- \*When driving,children must wear shoes and helmet.
- \*When driving,children should be seating in the seat and fasten the seat belt
- \*The maximum loading capacity of the vehicle is 35KGS, and can take only One child,the users must be aged 37 months to 96 months!

### ! WARNING!

The toy is to be assembled by an adult.

**WARNING!**

Warning!Not to be used in traffic.must be assembled by an adult.

This toy when in use,please in strict accordance with the manual safety

Operation,the startup is detection of tire braking

function,the steering

Wheel fastening,seat safety,etc.

The toy should be used with caution since skill is required to avoid falls or

Collisions causing injury to the user or third parties.

**Pictures are for reference only, please adhere to the original products as standard**